

INSTALLATION INSTRUCTIONS FOR YOUR VENDING MACHINE.

UNPACKING.

Your Vending Machine has been tested before leaving the factory. If any part should be damaged in transit, please return it for immediate replacement. Each carton contains:-

- a) Vending machine b) 2 Keys (taped to the back plate) c) Coin tray. d) Weight e) Screw pack


OPENING THE VENDING MACHINE

Using one of the keys provided, turn it in the lock which will then pop out. Hint: with the key at an angle, gently pulling the key will help the lock spring out. Slide the back plate to allow the 2 locking tabs on the front to miss the cut outs on the back plate.

SITING THE VENDING MACHINE

When siting the vending machine, ensure there is sufficient distance on the left hand side, for the door to open. The vending machine should be secured firmly to the wall using the screws provided or other suitable fixings.

This machine is adjustable between 1 & 4 pounds or 1 & 4 Euro. (£1 or €1 coins only)

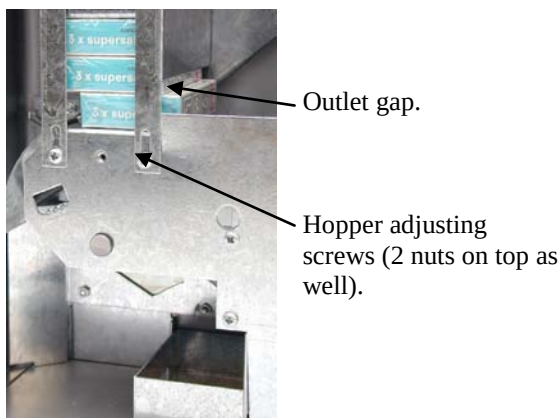

ADJUSTING THE COLUMN

The columns are pre set at the factory but can easily be adjusted to suit the pack being vended. Ensure the pack slides easily up and down in the hopper. Adjust the outlet gap by releasing the 2, M4 nuts at the top of the hopper and 2 pozi screws at the bottom. Slide the hopper up or down to give a gap that will allow 1 product to vend but not 2. (ie. make the height of the gap 1 ½ times the pack thickness.)


NOTE:

The weight goes on top of the column of products being vended.


CHANGING THE VEND VALUE.

The coin value can be adjusted in site. To make this adjustment, proceed as follows:


- 1/ Remove all the product from the hopper.
- 2/ Using the knob on the front of the machine, turn to the reject position until it stops.
- 3/ Remove the 3 nuts holding the coin cover plate in position and remove the cover plate.
- 4/ Adjust the coin stop to the required position (see below). Note, for 4 x 1eu the stop is removed.
- 5/ Replace the coin cover plate and replace the 3 nuts and test the machine.

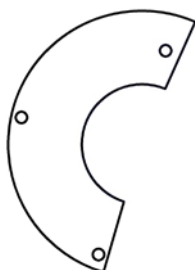

Coin cover plate

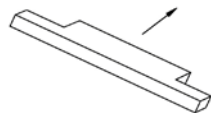

Coin stop.
Slide in this way

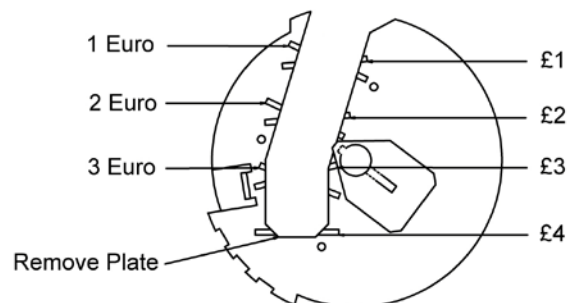

Adjust the coin stop to
the required position

SERVICING THE MACHINE

Using the key, unlock the catches on the side of the machine. (The lock will spring out when released.

Hint: with the key at an angle, gently pulling the key will help the lock spring out.).

Remove the weight from inside product channel and fill up with replacement products. **REPLACE THE WEIGHT.**

Remove any money from the machine.

Close the door and push the lock in. (The key is not required to lock the machine)

NOTE

After unlocking, remember to lift the front slightly when opening the machine and lift slightly when closing.

Please advise any operators that service this machine.

FAULT FINDING.

Q. The machine will vend a product free of charge.

A. Ensure the rotor stop is free to move up and down.
Inset the required coins and turn the knob gently. The rotor stop should be seen to rise and fall.

GUARANTEE

Your Vending machine is guaranteed for a period of one years against faulty workmanship from the date of purchase. Should it fail in normal use, within this period, just return the unit, properly packaged, for immediate repair or replacement

