

INSTALLATION INSTRUCTIONS FOR YOUR MULTI-6

Your Multi-6 vending machine has been set up at the factory and should give many years or trouble free operation.

Health & Safety.

The Multi-6 vending machine weighs in excess of 30 kilo (depending on the options requested) therefore ensure there is sufficient equipment / staff available when installing this machine.

To install the machine proceed as follows:

Remove the front door.

After carefully removing the machine from its carton, remove the keys from the back of the machine and lay it down on the floor. Using the keys, release the 2 locks on the door and open. Whilst in the open position, lift the door off its hinges.

Installation

Ensure the wall is flat and sufficiently strong to take the weight of the Multi-6. Using the screws provided, or other suitable fastenings, screw the chassis to the wall ensuring it is level. Remember to allow sufficient room for the door to open. Re hang the door. The battery pack should now be connected.



Product Label Identification

A standard label has been fitted in the display area if one was requested (optional extra). If you are fitting your own label, proceed as follows:

Remove the 2 screws securing the top of the black display panel and swing down. Remove the nuts securing the label back plate in position and take the back plate off. Using the paper template, fit part of the product pack by the appropriate button remembering to include the price. The top button (number 1) operates column number 1 (furthest left)

Filling the Multi-6 with product

The Multi-6 has been set up at the factory and a label has been fitted to the column to indicate the product being vended (If known). Remove the weight from the channel and fill remembering to place the weight on top of the final pack. (This weight can be discarded if the products fall correctly and they are of sufficient weight to activate the switch on the tractor unit. When changing to a new product or filling for the first time, operate the Multi-6 with the door open to ensure smooth operation. If a problem occurs, see the trouble shooting guide below.

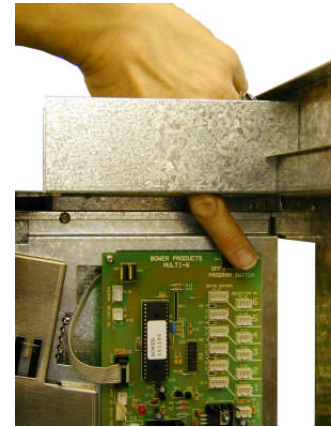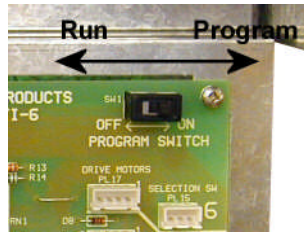

Changing the vend value

To change the value of any column proceed as follows:

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the 'on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Insert the value of the coins required for the new vend price. The value is shown in the display.
- 3/ Push the button that will operate that product.
- 4/ Return the switch in 1 above to the 'off' position and test.

To change the value of all the columns proceed as follows:

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the 'on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Insert the lowest value of the coins required for least expensive vend price. The value is shown in the display.
- 3/ Push all the buttons that will operate the products at this price.
- 4/ Insert more coins to give the next higher price. (Include the coins already inserted for the first price) and push the buttons that will operate the products at this price.
- 5/ Continue to do this until all the columns have been reset or until the columns that require re setting have been updated.
- 6/ Return the switch in 1 above to the 'off' position and test.

To check the quantity of products that have been vended.

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Do not insert any coins.
- 3/ Push button 1 (the top button) and P1 will be shown on the display.
- 4/ Push button 1 again and the number of items sold in column 1 will be indicated on the display. (Column 1 is the furthest left hand column).
- 5/ Push button 1 again and P2 will be shown on the display and pushing button 1 again will indicate the quantity sold in column 2. Repeat until all the columns have been viewed.
- 6/ Return the switch in 1 above to the 'off' position..

To reset all the column quantities.

When the display shows any 'P' number (i.e. 'P3'), Push button 2 and this will then reset ALL the column counters.

To check the total value of coins inserted.

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Keep pushing button 1 (the top button) until 'P7' is shown on the display.
- 3/ Push button 1 again and the display will indicate the high digits (before the decimal point) of the cash counter.
- 4/ Push button 1 again to indicate 'P8' on the display. Pushing button 1 again will indicate the low value of the cash counter (after the decimal point)
- 5/ Return the switch in 1 above to the 'off' position.

To run in 'TEST' mode

Running in test mode will allow for free vends to be made without adding to the vend counts.

To select this mode, proceed as follows:

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Keep pushing button 1 (the top button) until 'P9' is shown on the display.
- 3/ Pushing button 2 repeatedly toggles between 'run' and 'test' mode. 'Run mode is for normal operation.
- 4/ Return the switch in 1 above to the 'off' position.

Battery or mains operation

The vending machine can be operated by either battery or mains transformer. (Optional extra). It is pre set at the factory for battery operation. To change to mains operation, proceed as follows:

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Keep pushing button 1 (the top button) until 'PA' is shown on the display.
- 3/ Pushing button 2 repeatedly toggles between 'bat' (for battery mode) and '---' (for mains mode.).
- 4/ Return the switch in 1 above to the 'off' position.

To change the coin set

The Multi-6 can be programmed to accept either Pounds sterling (British) or Euro coins (EEC) The Multi-6 will accept the following coins:

£2, £1, 50p, 20p, 10p,
€2, €1, 50c, 20c, 10c.

To change the coin set proceed as follows:

- 1/ Lift the battery pack out of its location (leave connected), and beneath it you will find a slot. Beneath the slot there is a switch on the printed circuit board (see above). Move this switch to the on' position (towards the back of the machine). The display shows 'Prog'
- 2/ Keep pushing button 1 (the top button) until 'Pd' is shown on the display. Push the button once more.
- 3/ Pushing button 2 repeatedly toggles between 'CO 1' for Sterling, 'CO 2' for Euro
- 4/ Return the switch in 1 above to the 'off' position.

To add another column.

Other columns are available. Please follow the instructions that come with the column.

Cleaning

To clean the vending machine front, wipe down with a damp cloth. Do not use solvents, polishes, abrasives etc.

Troubleshooting

Question: When ejecting, the product strains to go round the deflector.

Answer:: Adjust the deflector up or down using the wing nuts on the front until it runs smoothly. This problem normally occurs when the product is very deep. Ensure the wing nuts are tight to prevent the deflector from dropping during use.

Question: The machine will not accept any coins

Answer: There must be product in at least one of the columns. If all the columns are empty, the coin will be rejected.
or
Check that you have got the correct coin set. i.e. you are not trying to put euros in a sterling machine. See 'To change the coin set' above

INSTRUCTIONS.

To open the machine ready for installation.

Health & Safety.

The Multi-6 vending machine weighs in excess of 30 kilo (depending on the options requested) therefore ensure there is sufficient equipment / staff available when installing this machine.

- 1/ Remove the keys that have been taped to the back of the machine.
- 2/ Lay the machine on its back and using the keys supplied release the top and bottom locks. If they do not pop out completely, turn the key slightly and pull the lock until a stop is felt.
- 3/ Open the front door and when open, lift off from the back plate.
- 4/ Inside the front door you will find the instructions for continuing the installation of your Multi-6

Product available when
buttons flash.

£1.00 Femcare

£3.00 Anadin

£3.00 Trojan
condoms

£1.00 Jelly beans

£1.00 Wrigleys
chewing gum

Product available
when buttons flash.

Multi-6. Set up as follows: _____

Date.....

68 = SVEMCO
94 = SVEMFE
120 = SVEMTO
136 = SVEMTA

Machine
Number(s)

COINAGE

£

€

Token

Button

Price

Column code

Product

Tested

Notes.

.....

.....

.....

.....



= Blank off.

4

= PCB no.

Office use.

Customer

Return to office. Inv. No.